


**REMOVAL AND INSTALLATION: HEA...****REMOVAL AND INSTALLATION: B-PILLAR TRIM PANEL (INTERIOR TRIM AND ORNAMENTATION)**Procedure SGML ID:  
N161288SECTION 501-05: Interior Trim and Ornamentation  
REMOVAL AND INSTALLATION2002 Explorer Sport/Sport Trac Workshop Manual  
Procedure revision date: 02/22/2002**B-Pillar Trim Panel**


## Special Tool(s)

**Removal and Installation**


1. Remove the windshield side garnish moulding.

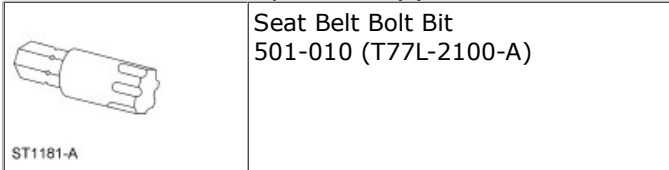

2. Remove the scuff plate.
  1. Starting at one end and working along the scuff plate, release the scuff plate locking tabs.
  2. Remove the scuff plate.

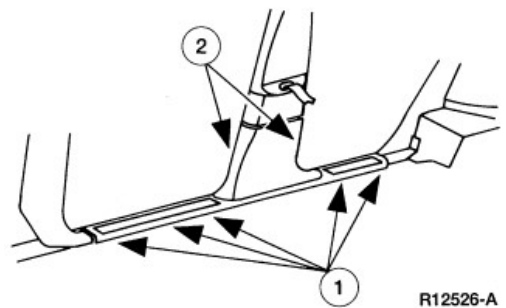


3. Remove the coat hook.
  1. Remove the screw.
  2. Remove the coat hook.

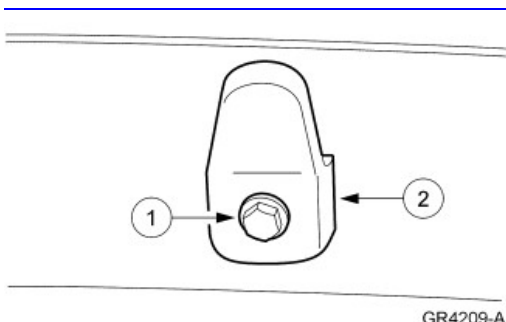


4. **NOTE:** Inspect the shoulder safety belt guide cover for damage. If the shoulder safety belt guide cover is damaged or if it does not remain closed, install a new shoulder safety belt guide cover.

**NOTE:** Shoulder safety belt guide cover shown removed for clarity.

From behind the front shoulder safety belt guide cover, release the retaining tab and open the cover.

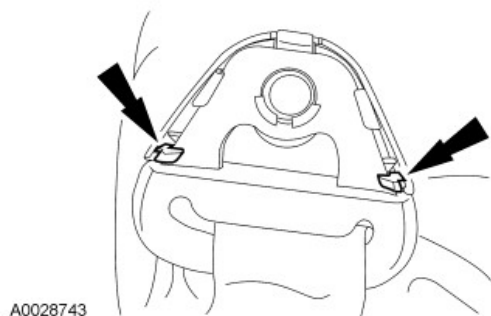


5. Remove the nut and shoulder safety belt guide.

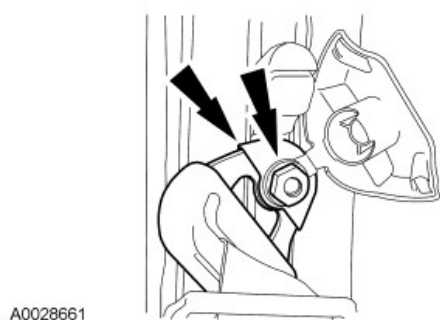


6. Position the carpet aside.

7. Using the special tool, remove the front safety belt anchor bolt.

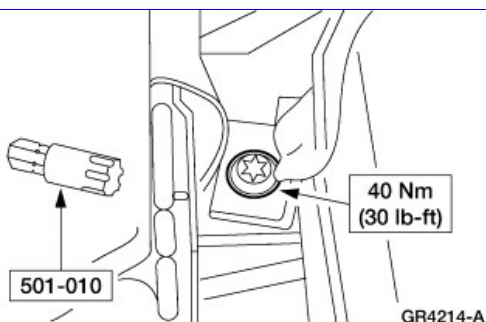

8. Remove the B-pillar trim panel.

1. Remove the pin-type retainer.
2. Feed the safety belt webbing through the opening.
3. Remove the B-pillar trim panel.

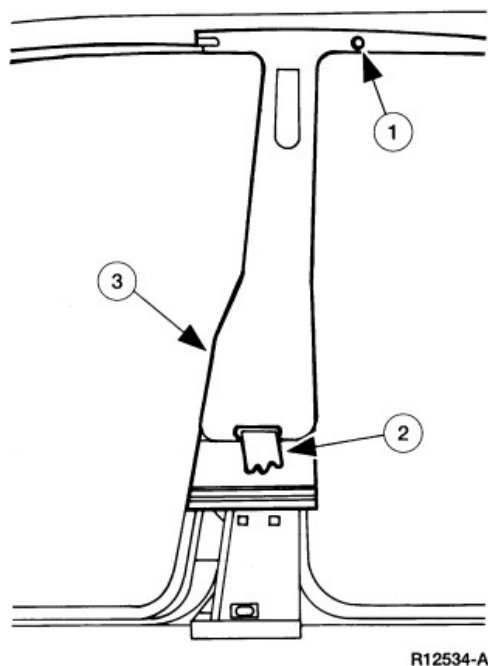

9. To install, reverse the removal procedure.

This publication contains material that is reproduced and distributed under a license from Ford Motor Company. No further reproduction or distribution of the Ford Motor Company material is allowed without the express written permission of Ford Motor Company.

Copyright 2007 - 2013 Service Repair Solutions, Inc.