


REMOVAL AND INSTALLATION: HEA...**REMOVAL AND INSTALLATION: REAR QUARTER TRIM PANEL (INTERIOR TRIM AND ORNAMENTATION)**Procedure SGML ID:
N161311SECTION 501-05: Interior Trim and Ornamentation
REMOVAL AND INSTALLATION2002 Explorer Sport/Sport Trac Workshop Manual
Procedure revision date: 02/22/2002**Rear Quarter Trim Panel**


Special Tool(s)

Seat Belt Bolt Bit
501-010 (T77L-2100-A)**Removal and Installation**

1. Remove the windshield side garnish moulding.

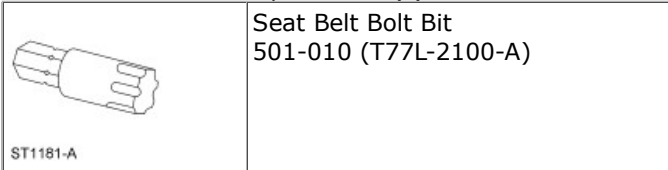


2. Remove the scuff plate.

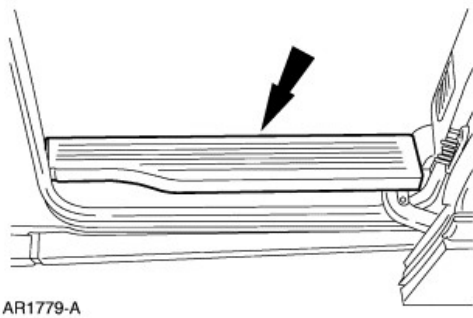


3. **NOTE:** Inspect the shoulder safety belt guide cover for damage. If the shoulder safety belt guide cover is damaged or if it does not remain closed, install a new shoulder safety belt guide cover.

Remove the front shoulder safety belt guide bolt cover.

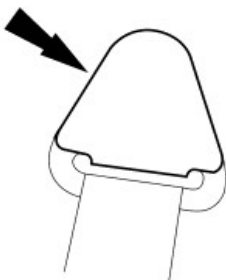


4. Using the special tool, remove the front shoulder safety belt guide bolt.

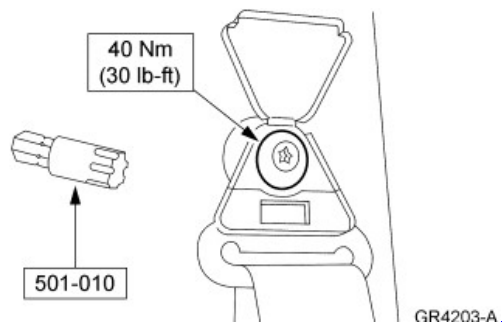


5. Position the carpet aside.

6. Using the special tool, remove the front safety belt anchor bolt.

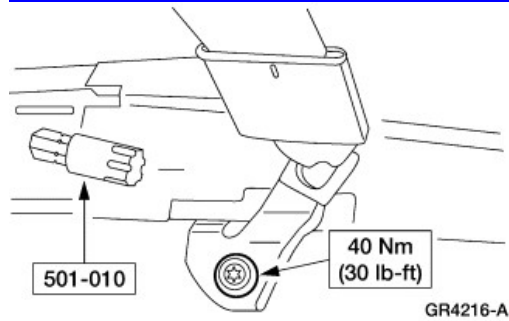

 
7. If equipped, remove the retractable cargo cover.



8. Remove the liftgate scuff plate.


9. Fold the rear seat into the load floor position.

10. Using the special tool, remove the rear shoulder safety belt guide bolt.

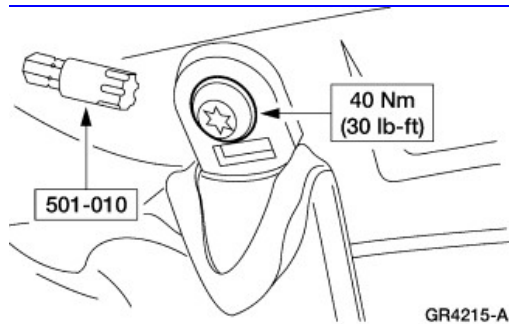


11. Position the carpet aside.

12. Using the special tool, remove the rear safety belt anchor bolt.

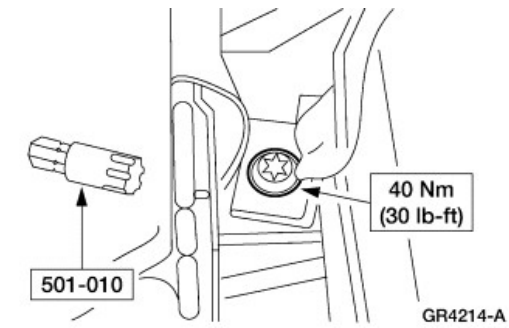


13. Remove the rear quarter window latch screws.

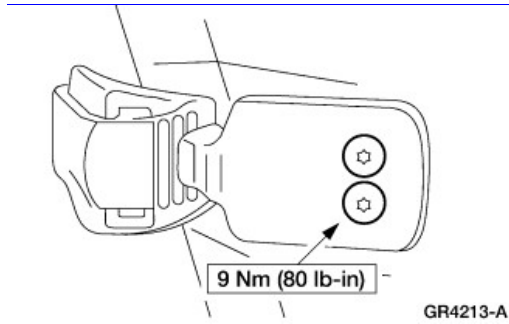


14. Remove the coat hook.

1. Remove the screw.
2. Remove the coat hook.

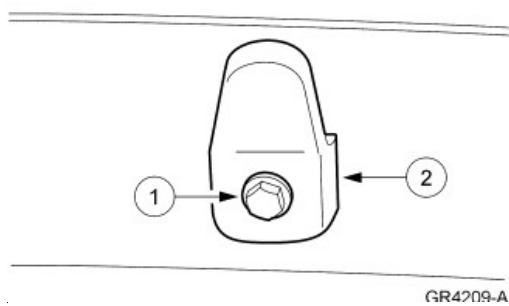


15. Remove the quarter trim panel front screw.

- Position the carpet aside to gain access to the screw.

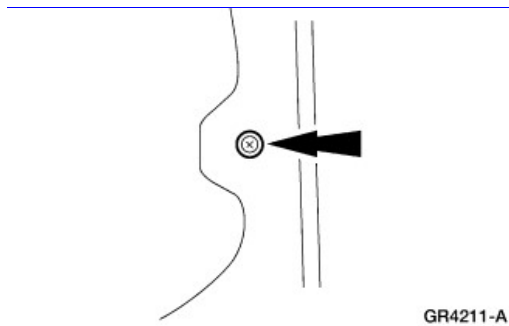


16. Remove the three quarter trim panel rear screws.

- Position the carpet aside to gain access to the screws.

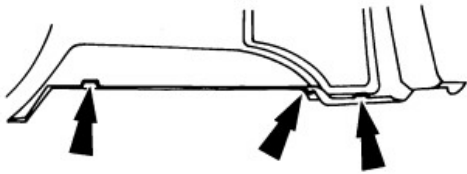


R12544-A

17. If equipped, remove the rear door lock control switch assembly.
- Disconnect the electrical connector.

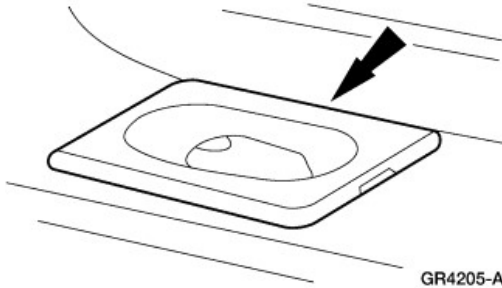

GR4205-A

18. Remove the quarter trim panel.
1. Remove the eight pin-type retainers.
 2. Feed the safety belt webbing through the opening in the quarter trim panel.
 3. Remove the quarter trim panel.

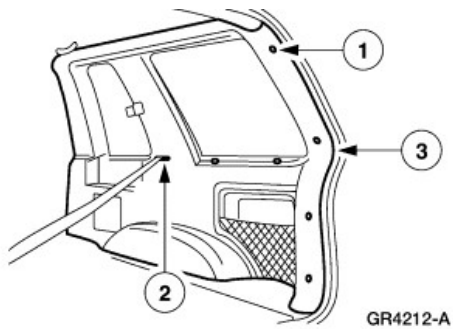

GR4212-A

19. To install, reverse the removal procedure.

This publication contains material that is reproduced and distributed under a license from Ford Motor Company. No further reproduction or distribution of the Ford Motor Company material is allowed without the express written permission of Ford Motor Company.

Copyright 2007 - 2013 Service Repair Solutions, Inc.