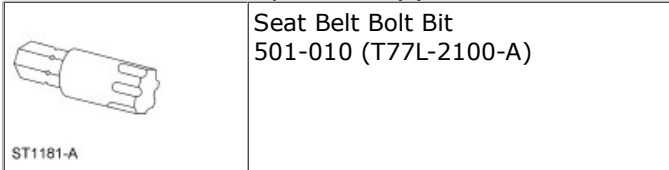


REMOVAL AND INSTALLATION: HEA...**REMOVAL AND INSTALLATION: C-PILLAR TRIM PANEL (INTERIOR TRIM AND ORNAMENTATION)**Procedure SGML ID:
N161292SECTION 501-05: Interior Trim and Ornamentation
REMOVAL AND INSTALLATION2002 Explorer Sport/Sport Trac Workshop Manual
Procedure revision date: 02/22/2002**C-Pillar Trim Panel**


Special Tool(s)

Seat Belt Bolt Bit
501-010 (T77L-2100-A)**Removal and Installation**


1. Remove the B-pillar trim panel. For additional information, refer to [B-Pillar Trim Panel](#) in this section.
2. Fold down the rear seat.
3. **NOTE:** Inspect the shoulder safety belt guide cover for damage. If the shoulder safety belt guide cover is damaged or if it does not remain closed, install a new shoulder safety belt guide cover.

NOTE: Shoulder safety belt guide cover shown removed for clarity.


From behind the front shoulder safety belt guide cover, release the retaining tab and open the cover.

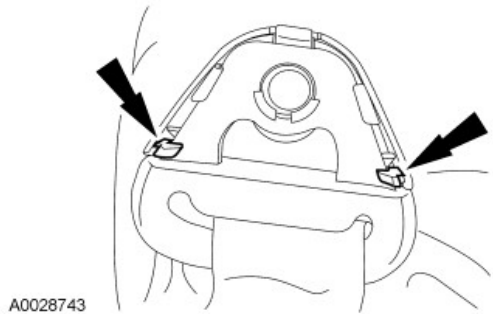


4. Remove the nut and shoulder safety belt guide.

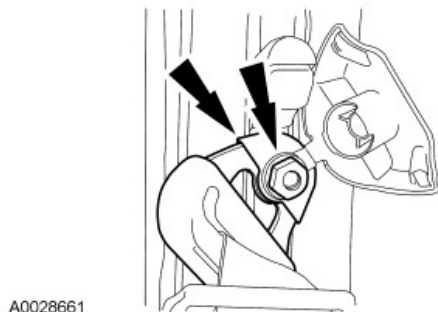


5. Position the carpet aside.
6. Remove the safety belt anchor trim cover.

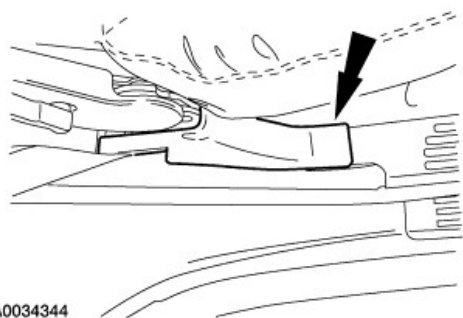


7. Remove the rear safety belt anchor nut.

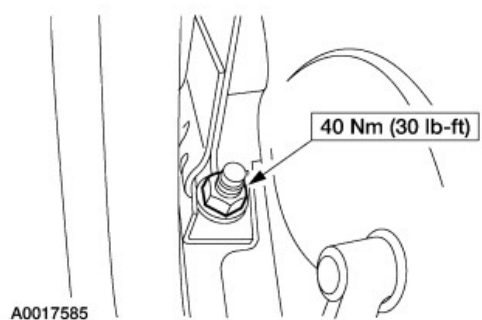

8. Remove the roof trim panel.

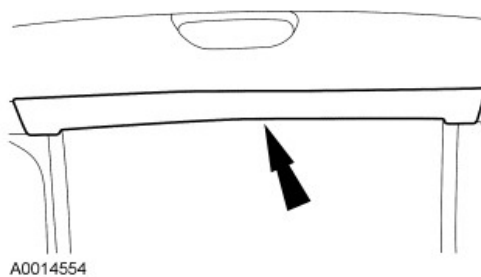


9. Remove the six luggage compartment back lower trim cover screws.

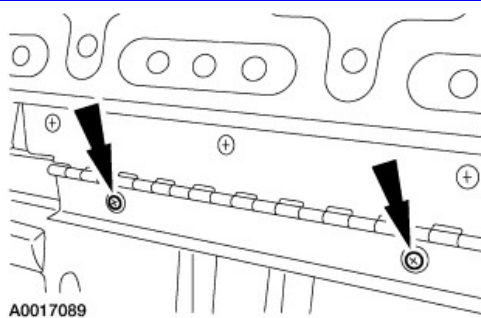

10. Remove the luggage compartment back lower trim cover.

- Remove the six pin-type retainers.

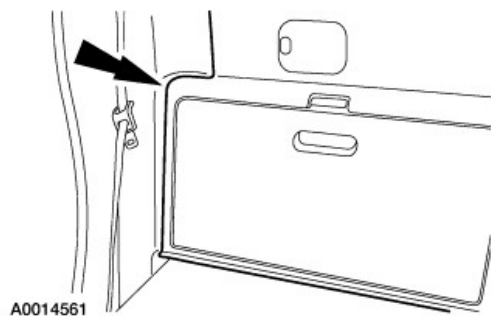


11. Remove the pin-type retainer from C-pillar trim panel.



12. Remove the safety belt anchor trim cover.

13. Remove the C-pillar trim panel.

- Feed the safety belt webbing through the opening.

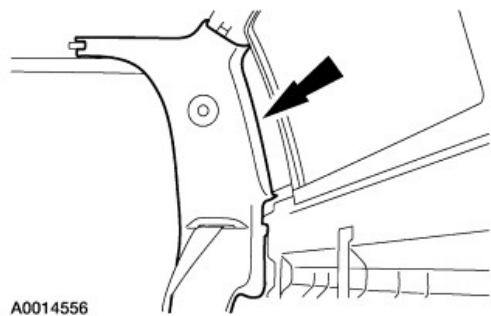

14. To install, reverse the removal procedure.

This publication contains material that is reproduced and distributed under a license from Ford Motor Company. No further reproduction or distribution of the Ford Motor Company material is allowed without the express written permission of Ford Motor Company.

Copyright 2007 - 2013 Service Repair Solutions, Inc.